


# SPRKM-R | CAR PARK GAS SENSOR

## Modbus register map

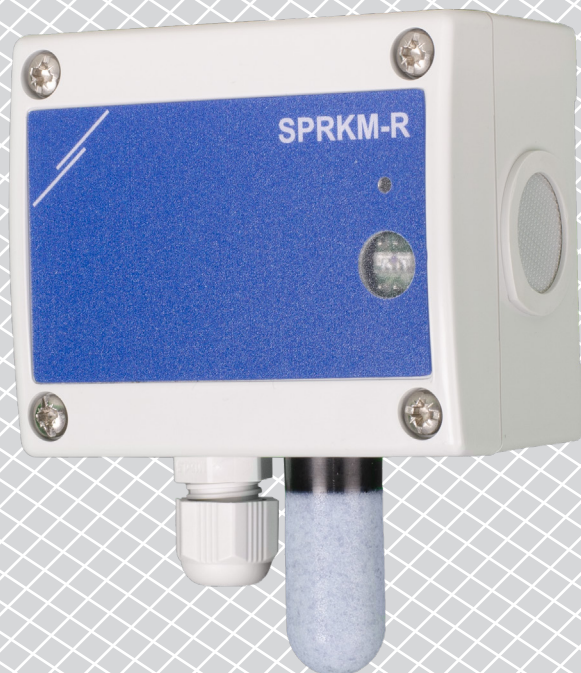

## MODBUS REGISTER MAP

INPUT REGISTERS					
		Data type	Description	Raw data range	Values
1	Temperature reading	signed integer	Actual temperature level	-300—700	500 = 50,0°C
2	Temperature output value	unsigned integer	Temperature output value	0—1.000	0 = 0 % 1.000 = 100 %
3	Temperature alert flag	unsigned integer	Flag indicates that measured Temperature is outside set alert values. Set to '1' when the measured value is outside the Temperature alert values defined by holding registers 13 and 14	0, 1	0 = Temperature measurement OK 1 = Temperature measurement too low/high
4	Temperature range limit flag	unsigned integer	Flag indicates that measured temperature is outside set range limit values. Set to '1' when the measured temperature is outside limit range values defined by holding registers 11 and 12	0, 1	0 = Temperature range OK 1 = Temperature range too low/high
5	Humidity, temperature sensor fault	unsigned integer	Flag that shows if the communication with temperature & humidity sensor is lost	0, 1	0 = OK 1 = Fault
6—9			Reserved, return 0		
10	Relative humidity level	unsigned integer	Actual relative humidity level	0—1.000	1.000 = 100,0 % rH
11	Relative humidity output value	unsigned integer	Relative humidity output value	0—1.000	0 = 0 % 1.000 = 100 %
12	Relative humidity alert flag	unsigned integer	Flag indicates that measured Relative humidity is outside set alert values. Set to '1' when the measured value is outside the Relative humidity alert values defined by holding registers 21 and 22	0, 1	0 = Relative humidity measurement OK 1 = Relative humidity measurement too low/high
13	Relative humidity range limit flag	unsigned integer	Flag indicates that measured Relative humidity is outside set range limit values. Set to '1' when the measured Relative humidity is outside limit range values defined by holding registers 19 and 20	0, 1	0 = Relative humidity range OK 1 = Relative humidity range too low/high
14	Humidity, temperature sensor fault	unsigned integer	Flag that shows if the communication with temperature & humidity sensor is lost	0, 1	0 = No 1 = Yes
15	Dew point level	signed integer	Calculated dew point	-700—700	200 = 20,0°C

INPUT REGISTERS					
		Data type	Description	Raw data range	Values
16–25			Reserved, return 0		
26	CO level	unsigned integer	Relevant CO level	0–1.000	100 = 100 ppm
27	CO output value	unsigned integer	Output value according to CO value	0–1.000	0 = 0 % 1.000 = 100 %
28	CO alert flag	unsigned integer	Flag indicates that measured CO level is outside set alert values. Set to '1' when the measured value is outside the CO values defined by holding registers 29 and 30	0, 1	0 = CO measurement OK 1 = CO measurement too low/high
29	CO range limit flag	unsigned integer	Flag indicates that measured CO is outside set range limit values. Set to '1' when the measured CO is outside limit range values set defined by holding registers 27 and 28	0, 1	0 = CO range OK 1 = CO range too low/high
30	CO sensor state	unsigned integer	Flag that shows if the communication with the CO sensor is lost	0, 1, 4	0 = OK 1 = Fault 4 = Warming-up
31	LPG level	unsigned integer	Propane level in PPM	0–21.000	2.100 = 2.100 ppm = 10% LEL
32	LPG Output value	unsigned integer	Output value according to propane level	0–1.000	0 = 0 % 1.000 = 100 %
33	LPG alert flag	unsigned integer	Flag indicates that measured LPG level is outside set alert values. Set to '1' when the measured value is outside the LPG values defined by holding registers 33 and 34	0, 1	0 = LPG measurement OK 1 = LPG measurement too low/high
34	LPG range limit flag	unsigned integer	Flag indicates that measured LPG is outside set range limit values. Set to '1' when the measured LPG is outside limit range values set defined by holding registers 31 and 32	0, 1	0 = LPG range OK 1 = LPG range too low/high
35	LPG Sensor state	unsigned integer	Flag that shows if the communication with the LPG sensor is lost	0, 1, 4	0 = OK 1 = Fault 4 = Warming-up
36–40			Reserved, return 0		
41	Ambient light intensity	unsigned integer	Measured ambient light intensity	0–32.000	1.000 = 1.000 lux
42	Active / Standby	unsigned integer	Active or Standby indication according the Active / Standby light level defined by holding registers 35 and 36. If the measured light level is between the two levels the indication is 0 (Low light intensity)	0–2	0 = Low light intensity 1 = Active 2 = Standby

## INPUT REGISTERS

		Data type	Description	Raw data range	Values
43	Ambient light sensor fault	unsigned integer	Flag that shows if the communication with the ambient light sensor is lost	0, 1	0 = OK 1 = Fault
44–50			Reserved, return 0		

**Note:** The input registers can be read via the Modbus command: "Read input registers".

## HOLDING REGISTERS

		Data type	Description	Raw data range	Values	Factory default values
1	Device slave address	unsigned integer	Modbus device address	1–247		1
2	Modbus baud rate	unsigned integer	Modbus communication baud rate	0–6	0 = 4.800 1 = 9.600 2 = 19.200 3 = 38.400 4 = 57.600 5 = 115.200 6 = 230.400	2
3	Modbus parity	unsigned integer	Parity check mode	0–2	0 = 8N1 1 = 8E1 2 = 8O1	1
4	Device type	unsigned integer	Device type. Read only	1.737	SPRKM-R = 1.737	
5	HW version	unsigned integer	Hardware version of the device. Read only	XXXX	0x0100 = HW version 1.0	
6	FW version	unsigned integer	Firmware version of the device. Read only	XXXX	0x0200 = FW version 2.0	
7			Reserved, return 0			
8	Modbus communication timeout	unsigned integer	Timeout setting for no Modbus communication.	0–60	0 = no timeout 60 = 60 minutes	0

HOLDING REGISTERS						
		Data type	Description	Raw data range	Values	Factory default values
9	Modbus network resistor termination (NBT)	unsigned integer	Set device as end device of the line / or not by connecting NBT	0, 1	0 = NBT disconnected 1 = NBT connected	0
10	Modbus registers reset	unsigned integer	Resets Modbus Holding registers to default values. When finished this register is automatically reset to '0'	0, 1	0 = Idle 1 = Reset Modbus Registers	0
11	Minimum temperature range	unsigned integer	Minimum value of temperature range, cannot be set higher than maximum temperature range minus 5°C	0—(Max -50)	100 = 10,0°C	0
12	Maximum temperature range	unsigned integer	Maximum value of temperature range, cannot be set less than minimum temperature range plus 5°C	(Min + 50)—500	500 = 50,0°C	500
13	Minimum temperature alert	unsigned integer	Minimum temperature alarm value	Min. temperature range—Max. temperature alarm	100 = 10,0°C	0
14	Maximum temperature alert	unsigned integer	Maximum temperature alarm value	Min. temperature alarm—Max. temperature range	500 = 50,0°C	500
15—18			Reserved, return 0			
19	Minimum relative humidity range	unsigned integer	Minimum value of relative humidity range, cannot be set higher than maximum relative humidity range minus 5%	0—(Max -50)	200 = 20,0 % rH	0
20	Maximum relative humidity range	unsigned integer	Maximum value of relative humidity range, cannot be set less than minimum relative humidity range plus 5%	(Min + 50)—1.000	850 = 85 % rH	1.000
21	Minimum relative humidity alert	unsigned integer	Minimum relative humidity alarm value	Min. relative humidity range—Max. relative humidity alarm	200 = 20,0 % rH	0
22	Maximum relative humidity alert	unsigned integer	Maximum relative humidity alarm value	Min. relative humidity alarm—Max. relative humidity range	850 = 85 % rH	1.000
23—26			Reserved, return 0			

HOLDING REGISTERS						
		Data type	Description	Raw data range	Values	Factory default values
27	Minimum CO range	unsigned integer	Minimum value of CO, cannot be set higher than maximum value minus 10 ppm	0—(Max. range—10)	100 = 100 ppm	0
28	Maximum CO range	unsigned integer	Maximum value of CO, cannot be set lower than minimum value plus 10 ppm	(Min. range +10)—1.000	100 = 100 ppm	1.000
29	Minimum CO alert	unsigned integer	Minimum CO alarm value	Min. CO range—Max. CO alarm	0 = 0 ppm	0
30	Maximum CO alert	unsigned integer	Maximum CO alarm value	Min. CO alarm—Max. CO range	200 = 200 ppm	100
31	Minimum LPG range	unsigned integer	Minimum LPG range, cannot be set higher than maximum LPG range minus 210 ppm	0—(Max. range—210)	210 = 210 ppm = 1 % LEL	0
32	Maximum LPG range	unsigned integer	Maximum LPG range, cannot be set less than minimum LPG range plus 210 ppm	(Min. range + 210)—21.000	21.000 = 21.000 ppm = 100 % LEL	21.000
33	Minimum LPG alert	unsigned integer	Minimum LPG alarm value	Min. LPG range—Max. LPG alarm	210 = 210 ppm = 1 % LEL	0
34	Maximum LPG alert	unsigned integer	Maximum LPG alarm value	Min. LPG alarm—Max. LPG range	2.100 = 2.100 ppm = 10 % LEL	2.100
35	Active light level	unsigned integer	The ambient light level above which 'Active' is indicated in input register 42	0—32.000	100 = 100 lux	100
36	Standby light level	unsigned integer	The ambient light level below which 'Standby' is indicated in input register 42--	0—32.000	10 = 10 lux	10
37—78			Reserved, return 0			
79	LED indication	unsigned integer	LED indication related to one of the parameters	1, 2, 5, 7	1 = temperature 2 = relative humidity 5 = CO 7 = LPG	7

HOLDING REGISTERS						
		Data type	Description	Raw data range	Values	Factory default values
80	LED intensity / brightness	unsigned integer	LED intensity (incrementing with step of 10 %)	0–10	0 = OFF 5 = 50 %	5
<p><b>Note:</b> The holding registers can be managed via the following Modbus commands: “Read Holding Registers”, “Write Single Register” or “Write Multiple Registers”.</p>						
<p>The free Sentera configuration and monitoring software 3SModbus can be downloaded via: <a href="https://www.sentera.eu/en/3smcenter">https://www.sentera.eu/en/3smcenter</a></p>						