 


# Intelligent temperature and humidity sensor

The FCTHX are intelligent sensors featuring adjustable temperature and relative humidity ranges. The used algorithm controls a single analogue / modulating output based on the measured T and rH values, which can be used to directly control an EC fan, an AC fan speed controller or an actuator powered damper. All parameters are accessible via Modbus RTU.

## **Key features**



• Selectable temperature and relative humidity ranges

•

- Fan speed control based on temperature and relative humidity
- Inset or surface mounting
- Bootloader for updating the firmware via Modbus RTU communication
- Ambient light sensor with adjustable 'active' and 'standby' level
- Modbus RTU communication
- 3 LEDs with adjustable light intensity for status indication
- Long-term stability and accuracy

Technical specifications				
Analogue / modulating output	0−10 VDC mode: $R_L \ge 50 \text{ k}\Omega$			
	0–20 mA mode: $R_L \le 500 \ \Omega$			
	PWM (open-collector type) mode: 1 kHz, R $\ge 50~k\Omega,$ PWM voltage level: 3,3 VDC or 12 VDC			
Typical field of use	Temperature range	0-50 °C		
	Relative humidity range	0—95 % rH (non-condensing)		
Accuracy	± 0,4 °C (range 0-50 °C)			
Accuracy	± 3% rH (range 0-100 %)			
Protection standard	IP30 (according to EN 60529)			

		Article codes
Article code	Supply	Imax
FCTHG	18—34 VDC	35 mA
	15-24 VAC ±10%	95 mA
FCTHF	18—34 VDC	38 mA

### Area of use

- Demand controlled ventilation based on temperature and relative humidity
- Suitable for residential and commercial buildings
- · For indoor use only

Wiring and connections				
Article code	FCTHF	FCTHG		
V+	18-34 VDC	18-34 VDC	15-24 VAC ± 10 %	
V-	Ground	Common ground	AC ~	
Α	Modbus RTU (RS485), signal A			
/В	Modbus RTU (RS485), signal /B			
Ao	Analogue / modulating output (0-10 VDC / 0-20 mA / PWM)			
GND	Ground Common ground			
Connections	Spring contact terminal block, cable cross section: 2,5 mm <sup>2</sup> ; pitch 5 mm; shielded cable			

Attention! The -F version of the product is not suited for 3-wire connection. It has separate grounds for power supply and analogue output. Connecting both grounds together might result in incorrect measurements. Minimum 4 wires are required to connect -F type sensors

The -G version is intended for 3-wire connection and features a 'common ground'. This means that the ground of the analogue output is internally connected with the ground of the power supply. For this reason, -G and -F types cannot be used together on the same network. Never connect the common ground of -G type articles to other devices powered by a DC voltage. Doing so might cause permanent damage to the connected devices.



		Indications
		T T T T T T T T T T T T T T T T T T T
ED	On	Measured temperature or relative humidity values are out of range
	Blinking	Communication with one of the sensors fails


1 - Red LED	On	Measured temperature or relative humidity values are out of range
	Blinking	Communication with one of the sensors fails
2 - Yellow LED	On	Measured temperature or relative humidity values are in the alert range
2 - Tellow LED	Blinking	Modbus communication has stopped and HR8 is activated (Modbus timeout > 0 seconds)
3 - Green LED	On	Measured temperature or relative humidity values are within range
4 - Ambient light sensor	0	Low light intensity / Active / Standby
5 - PROG header, P1	1 2 3 4 5	Put a jumper onto pins 1 and 2 and wait for at least 5 seconds to reset the Modbus communication parameters
		Put a jumper onto pins 3 and 4 and restart the supply to enter bootloader mode

Note: By default, the LED indicators visualise the measured temperature level. When the sensor is in bootloader mode, the green and yellow LEDs flash alternately. During the firmware download, the red LED is flashing additionally.






# Intelligent temperature and humidity sensor

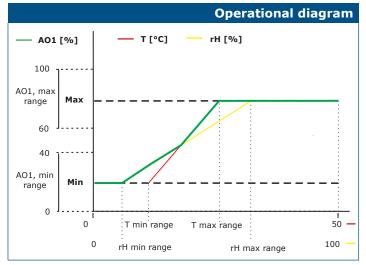

Note: The output changes automatically depending on the highest of the T or rH values, i.e. the highest of two output values controls the output. See the green line in the operational diagram above. One or multiple sensors can be deactivated. E.g. it is possible to control the output based on the measured temperature value only.

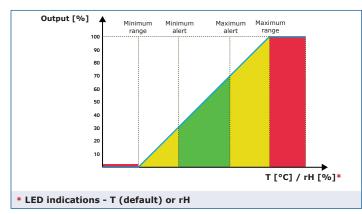

**Fixing and dimensions** 58 82 89 82 76 58 80 52  $\bigcirc$ 3 00000 38 15 J.

# Standards

CE

- Low Voltage Directive 2014/35/EC
  -EN 60529:1991 Degrees of protection provided by enclosures (IP Code) Amendment AC:1993 to EN 60529
  - EN 60730-1:2011 Automatic electrical controls for household and similar use Part 1: General requirements
- EMC directive 2014/30/EC:
  - EN 60730-1:2011 Automatic electrical controls for household and similar use -Part 1: General requirements -EN 61000-6-1:2007 Electromagnetic compatibility (EMC) - Part 6-1: Generic
  - EN 61000-6-1:2007 Electromagnetic Compatibility (EMC) Part 6-1: Generic standards Immunity for residential, commercial and light-industrial environments
    EN 61000-6-3:2007 Electromagnetic compatibility (EMC) Part 6-3: Generic standards Emission standard for residential, commercial and light-industrial environments Amendments A1:2011 and AC:2012 to EN 61000-6-3
  - EN 61326-1:2013 Electrical equipment for measurement, control and laboratory use - EMC requirements - Part 1: General requirements EN 61326-2-3:2013 Electrical equipment for measurement, control and laboratory
  - use EMC requirements Part 2-3: Particular requirements. Test configuration, operational conditions and performance criteria for transducers with integrated or remote signal conditioning

#### • WEEE 2012/19/EC

• RoHs Directive 2011/65/EC



Article	Packaging	[mm]	[mm]	Height [mm]	weight	weight
	Unit (1 pc.)	95	85	70	0,2 kg	0,21 kg
FCTHG FCTHF	Carton (10 pcs.)	492	182	84	2 kg	2,3 kg
	Box (60 pcs.)	590	380	280	12 kg	14,2 kg

Global trade item numbers (GTIN)				
Packaging	FCTHF	FCTHG		
Unit	05401003006245	05401003006252		
Carton	05401003300770	05401003300787		
Box	05401003501184	05401003501191		

### **Modbus registers**

The Sensistant Modbus configurator allows you to easily monitor and/or configure Modbus parameters.

The parameters of the unit can be monitored / configured through the 3SModbus software platform. You can download it from the following link:

### https://www.sentera.eu/en/3SMCenter

BUS

For more information about the Modbus registers, please refer to the product Modbus Register Map.

