

# ODVCM-R | MULTIFUNCTIONAL TRANSMITTER FOR HARSH ENVIRONMENTS

Mounting and operating instructions



# Table of contents

<b>SAFETY AND PRECAUTIONS</b>	<b>3</b>
<b>PRODUCT DESCRIPTION</b>	<b>4</b>
<b>ARTICLE CODES</b>	<b>4</b>
<b>INTENDED AREA OF USE</b>	<b>4</b>
<b>TECHNICAL DATA</b>	<b>4</b>
<b>STANDARDS</b>	<b>4</b>
<b>OPERATIONAL DIAGRAMS</b>	<b>5</b>
<b>WIRING AND CONNECTIONS</b>	<b>5</b>
<b>MOUNTING &amp; OPERATING INSTRUCTIONS IN STEPS</b>	<b>6</b>
<b>OPERATING INSTRUCTIONS</b>	<b>7</b>
<b>VERIFICATION OF INSTALLATION INSTRUCTIONS</b>	<b>8</b>
<b>TRANSPORT AND STORAGE</b>	<b>8</b>
<b>WARRANTY AND RESTRICTIONS</b>	<b>8</b>
<b>MAINTENANCE</b>	<b>8</b>

## SAFETY AND PRECAUTIONS

---



Read all the information, the datasheet, Modbus map, mounting and operating instructions and study the wiring and connection diagram before working with the product. For personal and equipment safety, and for optimum product performance, make sure you entirely understand the contents before installing, using, or maintaining this product.



For safety and licensing (CE) reasons, unauthorised conversion and / or modifications of the product are inadmissible.



The product should not be exposed to abnormal conditions, such as: extreme temperatures, direct sunlight or vibrations. Long-term exposure to chemical vapours in high concentration can affect the product performance. Make sure the work environment is as dry as possible; avoid condensation.



All installations shall comply with local health and safety regulations and local electrical standards and approved codes. This product can only be installed by an engineer or a technician who has expert knowledge of the product and safety precautions.



Avoid contacts with energised electrical parts. Always disconnect the power supply before connecting, servicing or repairing the product.



Always verify that you apply appropriate power supply to the product and use appropriate wire size and characteristics. Make sure that all the screws and nuts are well tightened and fuses (if any) are fitted well.



Recycling of equipment and packaging should be taken into consideration and these should be disposed of in accordance with local and national legislation / regulations.



In case there are any questions that are not answered, please contact your technical support or consult a professional.

## PRODUCT DESCRIPTION

ODVCM-R are multifunctional transmitters for harsh environments which measure temperature, relative humidity, and ambient light and detect a broad range of total volatile organic compounds (TVOCs). The TVOC concentration is an accurate indicator for indoor air quality. Based on the TVOC measurement, a CO<sub>2</sub> equivalent (CO<sub>2</sub>eq) is calculated. Based on the temperature and relative humidity measurements, the dew-point temperature is calculated. They are Power over Modbus supplied and all parameters are accessible via Modbus RTU.

## ARTICLE CODES

Code	Supply	I <sub>max</sub>	Connection
<b>ODVCM-R</b>	24 VDC, PoM	11 mA	RJ45

## INTENDED AREA OF USE

- Monitoring of temperature, relative humidity and air quality and ambient light detection
- Suitable for both indoor and outdoor use (e.g. open-air spaces, multi-storey and subterranean car parks, residential and commercial buildings)

## TECHNICAL DATA


- Selectable temperature range: -30–70 °C
- Selectable relative humidity range: 0–100 %
- Selectable TVOC range: 1–60.000 ppb
- Removable TVOC / CO<sub>2</sub>eq sensor element
- Bootloader for updating the firmware via Modbus RTU communication
- Warm-up time: 15 minutes
- Accuracy: ±0,4 °C (-30–70 °C); ±3 % rH (0–100 % rH)
- Day / Night detection via ambient light sensor
- Ambient light sensor with adjustable 'active' and 'standby' level
- Enclosure material: POLYFLAM® RABS 90000 UV5, colour: gray RAL 7035
- Protection standard: IP65 (according to EN 60529)
- Typical range of use:
  - ▶ temperature: 0–50 °C
  - ▶ rel. humidity: 0–95 % rH (non-condensing)
  - ▶ TVOC: 0–60.000 ppb

## STANDARDS

- Low Voltage Directive 2014/35/EC: CE
  - ▶ EN 60529:1991 Degrees of protection provided by enclosures (IP Code) Amendment AC:1993 to EN 60529
  - ▶ EN 61010-1:2010 Safety requirements for electrical equipment for measurement, control, and laboratory use - Part 1: General requirements
- EMC directive 2014/30/EC:
  - ▶ EN 61000-6-1:2007 Electromagnetic compatibility (EMC) - Part 6-1: Generic standards - Immunity for residential, commercial and light-industrial environments
  - ▶ EN 61000-6-2:2005 Electromagnetic compatibility (EMC) - Part 6-2: Generic standards - Immunity for industrial environments. Amendment AC:2015 to EN 61000-6-2
  - ▶ EN 61000-6-3:2007 Electromagnetic compatibility (EMC) - Part 6-3: Generic standards - Emission standard for residential, commercial and light-industrial environments Amendments A1:2011 and AC:2012 to EN 61000-6-3
  - ▶ EN 61326-1:2013 Electrical equipment for measurement, control and laboratory use - EMC requirements - Part 1: General requirements

- ▶ EN 61326-2-3:2013 Electrical equipment for measurement, control and laboratory use - EMC requirements - Part 2-3: Particular requirements - Test configuration, operational conditions and performance criteria for transducers with integrated or remote signal conditioning
- WEEE 2012/19/EC
- RoHs Directive 2011/65/EC

## OPERATIONAL DIAGRAMS

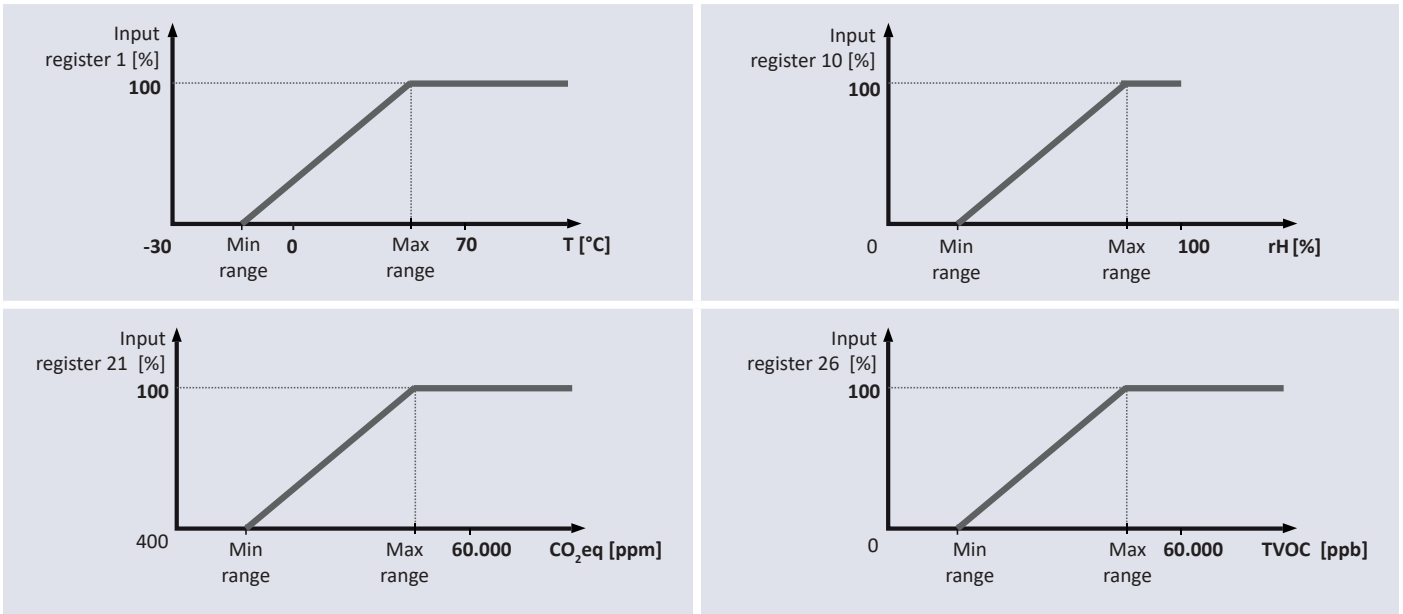

## WIRING AND CONNECTIONS

RJ45 socket (Power over Modbus)		
Pin 1	24 VDC	Supply voltage
Pin 2		
Pin 3	A	Modbus RTU communication, signal A
Pin 4		
Pin 5		
Pin 6	/B	Modbus RTU communication, signal /B
Pin 7	GND	Ground, supply voltage
Pin 8		


## MOUNTING & OPERATING INSTRUCTIONS IN STEPS

Before you start mounting the unit, read carefully **"Safety and Precautions"**. Choose a smooth surface for mounting location, preferably not directly exposed to the sun (e.g. the wall of a building facing north or north-west).

**Follow these steps:**


1. Unscrew the front cover of the enclosure to remove it.
2. Fix the enclosure onto the surface by means of suitable fasteners while adhering to the mounting dimensions shown in **Fig. 1 Mounting dimensions** and the correct mounting position shown in **Fig. 2 Mounting position**.

**Fig. 1 Mounting dimensions**

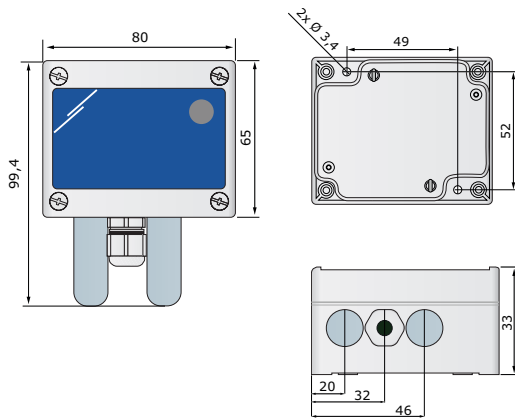



**Fig. 2 Mounting position**

Correct

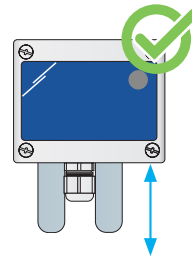


Position at min.  
1,5 m from the  
ground / floor

Incorrect

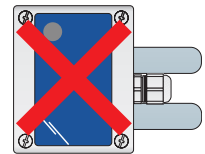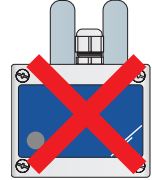

3. Insert the cable through the cable gland, then crimp and plug it into the RJ45 socket as shown in **Fig. 3** below and the **Wiring and connections** section above.

**Fig. 3 Connection**

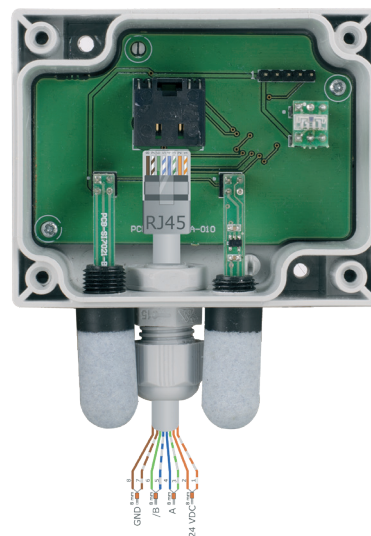

4. Put back the cover and secure it with the screws.
5. Switch on the power supply.


- Customise the factory settings to the desired ones via the 3SModbus software or the Sensistant configurator. For the default factory settings, see *Modbus register maps*.

**NOTE**

For the complete Modbus register data, refer to the product *Modbus Register Map*, which is a separate document attached to the article code on the website and contains the registers list. Products with earlier firmware versions may not be compatible with this list.

**Optional settings**

To assure correct communication, the NBT needs to be activated in only two devices on the Modbus RTU network. If necessary, enable the NBT resistor via 3SModbus or Sensistant (*Holding register 9*).

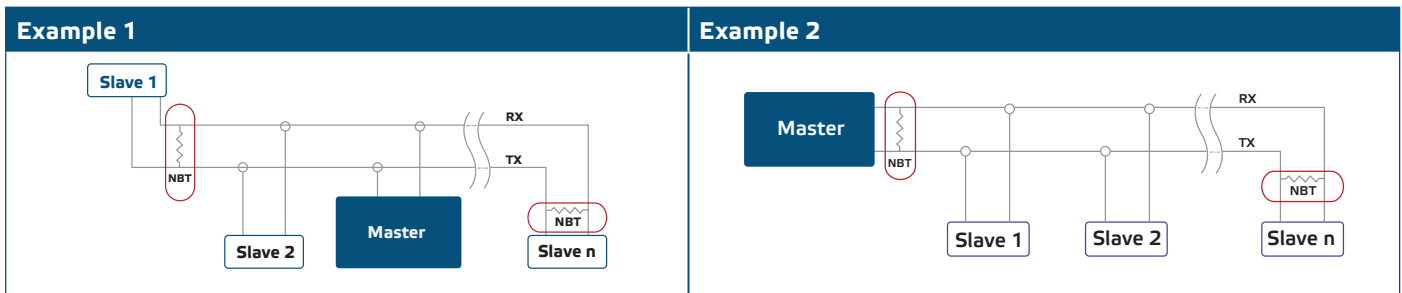

**NOTE**

On a Modbus RTU network, two bus terminators (NBTs) need to be activated.

**NOTE**

The sensor is not designed, manufactured or intended for use or re-sale as control or monitoring equipment in environments requiring life safety performance, in which the failure of the sensor could lead directly to death, personal injury, or severe physical or environmental damage.

**CAUTION**

Do not expose to direct sunlight!

**NOTE**

The compounds released from plastics may influence the sensor readings. Please allow several days for the sensor to stabilize before you obtain the accurate values.

## OPERATING INSTRUCTIONS

**NOTE**

For detailed information and settings, refer to the product *Modbus register map*, which is attached to the article code on our website.

**NOTE**

The warm-up time for the sensor to attain its highest accuracy and performance level once the voltage supply has been applied is 15 minutes. During the warm-up period, TVOC / CO<sub>2</sub>eq measurements will return 0.

**Calibration procedure:**

Sensor calibration is not necessary. All sensor elements are calibrated and tested in our factory. In the unlikely event of TVOC / CO<sub>2</sub>eq sensor element failure, this component can be replaced.

#### Bootloader

Thanks to the bootloader functionality, the unit firmware can be updated via Modbus RTU communication. With 3SM boot Application (part of 3SM center software suite), 'boot mode' is automatically activated and the firmware can be updated.



#### NOTE

*Make sure the power supply does not get interrupted during "bootload" procedure, otherwise you risk losing unsaved data.*

#### Ambient light sensor

The measured light intensity in lux is available in Input Register 41. Additionally, an active and standby level can be defined in Holding registers 35 and 36. Input Register 42 indicates if the measured value is below standby level, above active level or in between both levels:

- Ambient light level < standby level: Input Register 42 indicates "Standby".
- Ambient light level > active level: Input Register 42 indicates "Active".
- Standby level < Ambient light level < Active level: Input Register 42 indicates "Low intensity".

## VERIFICATION OF INSTALLATION INSTRUCTIONS

---

If your device does not function as expected, please check the connections and parameter settings.

## TRANSPORT AND STORAGE

---

Avoid shocks and extreme conditions; stock in original packing.

## WARRANTY AND RESTRICTIONS

---

Two years from the delivery date against defects in manufacturing. Any modifications or alterations to the product after the date of publication relieve the manufacturer of any responsibilities. The manufacturer bears no responsibility for any misprints or mistakes in this data.

## MAINTENANCE

---

In normal conditions this product enclosure is maintenance-free. If soiled, clean with a dry or damp cloth. In case of heavy pollution, clean with a non-aggressive product. The sensor element protector is made from porous material and, when exposed to extreme climate conditions such as dust, water and wind, may become clogged. This may result in faulty measurements. Please clean with mild non-acidic detergent. In these circumstances the unit should be disconnected from the supply. Pay attention that no fluids enter the unit. Only reconnect it to the supply when it is completely dry.