## MANUAL DE INSTRUCCIONES

CÓMO CONECTAR LA PUERTA DE ENLACE A INTERNET A UNA RED WI-FI





## CÓDIGOS DE ARTÍCULOS

Este manual de instrucciones explica cómo se conectan las puertas de enlace a Internet de Sentera a una red Wi-Fi local. El documento se aplica para los siguientes códigos de artículos:

- DIGWM
- SIGWM
- DIG-M-2\*
- SIG-M-2\*
- \* Las puertas de enlace de Internet DIG-M-2 y SIG-M-2 también se pueden conectar por cable a un rúter. En ese caso, use un cable de red normal y no aplica la configuración de Wi-Fi, que se explicará a continuación. Véase directamente la configuración de SenteraWeb, que se encuentra al final de este documento.

## **CONECTE LA PUERTA DE ENLACE A INTERNET A LA RED WI-FI**

- Conecte la fuente de alimentación
- Por defecto se activará el LED rojo de la puerta de enlace a Internet. Esto indica, que no existe conexión con la red Wi-Fi
- Para ajustar la configuración de la puerta de enlace a Internet, proceda de la siguiente manera:
  - Usando su ordenador o dispositivo móvil, busque redes Wi-Fi disponibles (consulte la Fig. 1)
  - Conecte con la puerta de enlace a Internet (XIGxM-xxxxxxxx), usando la contraseña "123456789"



8:35	Ø 📚 🛛 🗩	8:35 Ør	
< Wi-Fi		< Wi-Fi	
Interaction dataset (100)	• ?	Sementario data data data data data data data dat	<b>(</b>
Setteral annual PD 1111	<b>*</b> >	Second consult to 1 and	<b>(</b>
Setteral antido Practa 1000	∎ <b>≈</b> >	XIG-M-FC:F5:C4:03:A0:F8	
VINCINE 45 MPL, AND	∎ <b>≈</b> >	122456780	
105-10-10, AA 30, 80 (27.50)	A 🛜 >	123456789	
10.404 (CAR.01.00.00.10	₽ \$>	Cancel Connect	
XIG-M-FC:F5:C4:03:A0:F8		1 2 3 4 5 6 7 8	9
Add network	>	qwertyui	0
WI-FI SETTINGS	_	asd fghjk	Т
Wi-Fi assistant Keep data and Wi-Fi on to switch to data w	when	_ z x c v b n m	×
Refresh	_	?123 ,	

- Abra el navegador de Internet de su dispositivo móvil u ordenador e ingrese la siguiente URL: "192.168.1.123"
- Esto le lleva a la página de host interna de la puerta de enlace a Internet de Sentera (consulte la Fig. 2)
- Marque la casilla de Wi-Fi
- Seleccione la red Wi-Fi a la que desee conectar su puerta de enlace
- Introduzca la contraseña de la red Wi-Fi seleccionada
- Haga clic en "Save & Restart"
- Ahora su puerta de enlace está conectada a la red Wi-Fi. El LED verde se activara
- La página de host interno ya no estará disponible. Si tiene problemas o desea seleccionar una red Wi-Fi diferente, presione el botón de reinicio de Wi-Fi durante 5 segundos y reinicie este procedimiento.



08:47       (192.168.1.123)         (192.168.1.123)       (1)         IP ADDRESS: 192.168.1.123       (1)         Network Configuration         • Wi-Fi       (1)         • Network 1: SenteraControlsTemse       (1)         • Network 2: SenteraControlsExtern       (1)         • Network 3: SenteraControlsExtern       (1)         • Network 5: SenteraControlsExtern       (1)	08:47       ③ 登 48%●         ☆ ●       192.168.1.123       ①         IP ADDRESS: 192.168.1.123         Network 2: 92.168.1.123         ● Wi-Fi       ●         ● Network 1: Senteration       ●         ● Network 2: SenteraControlsTemse       ●         ● Network 3: SenteraControlsExtern       ●         ● Network 4: SenteraControlsTemse       ●         ● Network 5: SenteraControlsTemse       ●	08:47       192.168.1.123       ●         192.168.1.123       ●       ●         P ADDRESS: I92.168.1.123       ●       ●         Network Configuration       ●       ●         Network 1: SenteraControlsTemse       ●         Network 2: SenteraControlsExtern       ●         Network 3: SenteraControlsExterns       ●         Network 5: SenteraControlsExterns       ●         Save & Restart       ●         (1)       ●       ●         □       ✓       ●         □       □       ✓	2									
Image: 192.168.1.123IP ADDRESS: 192.168.1.123Network ConfigurationWi-FiNetwork 1: SenteraControlsTemseNetwork 2: SenteraControlsExternNetwork 3: SenteraControlsExternNetwork 4: SenteraControlsTemseNetwork 5: SenteraControlsRFIDPassword: []	♪       192.168.1.123         IP ADDRESS: 192.168.1.123       ✓         Network Configuration       ✓         • Wi-Fi       ✓         • Network 1: SenteraControlsTemse       ✓         • Network 2: SenteraControlsExtern       ✓         • Network 3: SenteraControlsExtern       ✓         • Network 5: SenteraControlsRFID       ✓         Password:       ✓         Save & Restart       ✓         ✓       △       ✓         ✓       △       ✓	192.168.1.123         ()             ADDRESS: 192.168.1.123             AEtwork Configuration         Network 1: SenteraControlsTemse         Network 2: SenteraControlsExtern         Network 3: SenteraControlsExtern         Network 5: SenteraControlsRFID         Network 5: SenteraControlsRFID         Save & Restart		08:47	7				48% 🛢			
IP ADDRESS: 192.168.1.123  Network Configuration  Wi-Fi  Network 1: SenteraControlsTemse Network 2: SenteraControlsExtern Network 3: SenteraControlsExtern Network 4: SenteraControlsTemse Network 5: SenteraControlsRFID Password:	IP ADDRESS: 192.168.1.123   Network Configuration   • Wi-Fi   Network 1: SenteraControlsTemse   • Network 2: SenteraControlsExtern   • Network 3: SenteraControlsExtern   • Network 4: SenteraControlsTemse   • Network 5: SenteraControlsRFID   Password:	P ADDRESS: 192.168.1.123			Ð	192.1	58.1.123		U			
<ul> <li>Network Configuration</li> <li>Wi-Fi</li> <li>Network 1: SenteraControlsTemse</li> <li>Network 2: SenteraControlsExtern</li> <li>Network 3: SenteraControlsExtern</li> <li>Network 4: SenteraControlsTemse</li> <li>Network 5: SenteraControlsRFID</li> </ul>	Network Configuration   ● Wi-Fi   Passwork 1: SenteraControlsTemse   ● Network 2: SenteraControlsExtern   ● Network 3: SenteraControlsExtern   ● Network 4: SenteraControlsTemse   ● Network 5: SenteraControlsRFID   Password:	Network Configuration   Wi-Fi   Network 1: SenteraControlsTemse   Network 2: SenteraControlsExtern   Network 3: SenteraControlsExtern   Network 4: SenteraControlsTemse   Network 5: SenteraControlsRFID   assword:		IP ADI	DRESS: 19	92.168.1	.123					
<ul> <li>Network Configuration</li> <li>Wi-Fi</li> <li>Network 1: SenteraControlsTemse</li> <li>Network 2: SenteraControlsExtern</li> <li>Network 3: SenteraControlsExtern</li> <li>Network 4: SenteraControlsTemse</li> <li>Network 5: SenteraControlsRFID</li> </ul>	Network Configuration         ● Wi-Fi         ● Network 1: SenteraControlsTemse         ● Network 2: SenteraControlsExtern         ● Network 3: SenteraControlsExtern         ● Network 4: SenteraControlsTemse         ● Network 5: SenteraControlsRFID         Password:         Save & Restart         ✓       >         △       >         △       ✓	Network Configuration   Wi-Fi   Network 1: SenteraControlsTemse   Network 2: SenteraControlsExtern   Network 3: SenteraControlsExtern   Network 4: SenteraControlsTemse   Network 5: SenteraControlsRFID   assword:										
<ul> <li>Wi-Fi</li> <li>Network 1: SenteraControlsTemse</li> <li>Network 2: SenteraControlsExtern</li> <li>Network 3: SenteraControlsExtern</li> <li>Network 4: SenteraControlsTemse</li> <li>Network 5: SenteraControlsRFID</li> </ul>	<ul> <li>Wi-Fi</li> <li>Network 1: SenteraControlsTemse</li> <li>Network 2: SenteraControlsExtern</li> <li>Network 3: SenteraControlsExtern</li> <li>Network 4: SenteraControlsTemse</li> <li>Network 5: SenteraControlsRFID</li> </ul> Password:	<ul> <li>Wi-Fi</li> <li>Network 1: SenteraControlsTemse</li> <li>Network 2: SenteraControlsExtern</li> <li>Network 3: SenteraControlsExtern</li> <li>Network 4: SenteraControlsTemse</li> <li>Network 5: SenteraControlsRFID</li> <li>assword:</li></ul>		Netw	ork Co	nfigura	ation					
<ul> <li>Network 1: SenteraControlsTemse</li> <li>Network 2: SenteraControlsExtern</li> <li>Network 3: SenteraControlsExtern</li> <li>Network 4: SenteraControlsTemse</li> <li>Network 5: SenteraControlsRFID</li> </ul>	Network 1: SenteraControlsTemse   Network 2: SenteraControlsExtern   Network 3: SenteraControlsExtern   Network 4: SenteraControlsTemse   Network 5: SenteraControlsRFID   Password:   Save & Restart	Network 1: SenteraControlsTemse   Network 2: SenteraControlsExtern   Network 3: SenteraControlsExtern   Network 4: SenteraControlsTemse   Network 5: SenteraControlsRFID   assword:   Save & Restart  III		• Wi	-Fi							
<ul> <li>Network 2: SenteraControlsExtern</li> <li>Network 3: SenteraControlsExtern</li> <li>Network 4: SenteraControlsTemse</li> <li>Network 5: SenteraControlsRFID</li> </ul> Password:	<ul> <li>Network 2: SenteraControlsExtern</li> <li>Network 3: SenteraControlsExtern</li> <li>Network 4: SenteraControlsTemse</li> <li>Network 5: SenteraControlsRFID</li> <li>Password:</li></ul>	Network 2: SenteraControlsExtern   Network 3: SenteraControlsExtern   Network 4: SenteraControlsTemse   Network 5: SenteraControlsRFID   assword:   Save & Restart  () () () () () () () () () () () () () (		🗹 Net	work 1: S	Sentera	Controls	sTemse				
<ul> <li>Network 3: SenteraControlsExtern</li> <li>Network 4: SenteraControlsTemse</li> <li>Network 5: SenteraControlsRFID</li> <li>Password:</li> </ul>	<ul> <li>Network 3: SenteraControlsExtern</li> <li>Network 4: SenteraControlsTemse</li> <li>Network 5: SenteraControlsRFID</li> <li>Password:</li></ul>	Network 3: SenteraControlsExtern   Network 4: SenteraControlsTemse   Network 5: SenteraControlsRFID   assword:    Save & Restart    Save & Restart      III      III		Network 2: SenteraControlsExtern								
<ul> <li>Network 4: SenteraControlsTemse</li> <li>Network 5: SenteraControlsRFID</li> <li>Password:</li> </ul>	Network 4: SenteraControlsTemse   Network 5: SenteraControlsRFID   Password:   Save & Restart     ♦     ♠     ♠     ●	Network 4: SenteraControlsTemse   Network 5: SenteraControlsRFID   assword:		Network 3: SenteraControlsExtern								
Network 5: SenteraControlsRFID Password:	Network 5: SenteraControlsRFID   Password:   Save & Restart         ∴   ∴   ∴   ∴	Network 5: SenteraControlsRFID assword:		🗆 Net	work 4: S	Sentera	Controls	sTemse				
Password:	Password: Save & Restart < > ∩ ☆ ⓓ =	assword: Save & Restart < >		Network 5: SenteraControlsRFID								
	Save & Restart < >	Save & Restart < >		Dacew	ord			1				
	Save & Restart <  >	Save & Restart < >		rassw								
	Save & Restart	Save & Restart < >										
	< > @ 🕼 🛋	< > @ ☆ ₫ ⊉ Ⅲ □ <		Save &	Restart							
Save & Restart				<	>		£₽	4				
Save & Restart	III O <				Ш	C	D	<				

## **ABRA SENTERAWEB**

Ahora todo está preparado para configurar su instalación a través de SenteraWeb.

¡Recuerda que se precisa el número de serie de cada producto, que Usted quiere conectar a su instalación!

Siga los siguientes pasos:

- 1. Crea su cuenta en SenteraWeb
- 2. Inicie sesión a través de: https://www.senteraweb.eu/es/Account/Login
- 3. Crea su instalación, introduciendo el número de serie de la puerta de enlace
- 4. Asegúrese de que todos los dispositivos, que desee agregar a su instalación estén alimentados y conectados (a través de Modbus RTU) al canal principal (master) de la puerta de enlace a Internet
- 5. Ahora Usted puede comenzar a agregar los dispositivos subordinados (slave) a la instalación, introduciendo sus números de serie







Asegúrese de que los dispositivos, que desee agregar a su instalación en SenteraWeb tengan Modbus ID 1 (ajustes de fábrica).

SenteraWeb asignará una nueva ID de Modbus al dispositivo cuando lo agregue a su instalación, y lo volverá a poner en 1 cuando Usted retire el dispositivo de su instalación.