

SMTND-AL | CONTROL SWITCH

Mounting and operating instructions



Table of contents

- 1. SAFETY AND PRECAUTIONS.....
- 2. PRODUCT DESCRIPTION.....
- 3. ARTICLE CODES.....
- 4. INTENDED AREA OF USE.....
- 5. TECHNICAL DATA.....
- 6. STANDARDS.....
- 7. WIRING AND CONNECTIONS.....
- 8. MOUNTING INSTRUCTIONS IN STEPS.....
- 9. VERIFICATION OF INSTALLATION.....
- 10. TRANSPORT AND STORAGE.....
- 11. WARRANTY AND RESTRICTIONS.....
- 12. MAINTENANCE.....

1. SAFETY AND PRECAUTIONS



Read all the information in this manual, in the datasheet and in the Modbus Register Map before working with the product. For personal and equipment safety and for optimum product performance, make sure you fully understand the content before installing, using or servicing this product.



For safety and licensing (CE) reasons, unauthorised conversions and / or modifications of the product are inadmissible.



The product should not be exposed to abnormal conditions, such as extreme temperatures, direct sunlight or vibrations. Long-term exposure to chemical vapours in high concentrations can affect the product performance. Make sure the work environment is as dry as possible and avoid condensation.



All installations must comply with local health and safety regulations and local electrical standards and approved codes. This product should only be installed by an engineer or a technician with expert knowledge of the product and safety precautions.



Avoid contact with energised electrical parts. Always disconnect the power supply before connecting, servicing or repairing the product.



Always check that you are connecting the correct power supply to the product and use wires with the correct characteristics and cross-section. Make sure all screws and nuts are properly tightened and fuses (if any) are in place.



Consideration should be given to recycling the equipment and packaging. These should be disposed of in accordance with local and national laws and regulations.



If there are questions that are not answered, contact your technical support or consult a professional.

2. PRODUCT DESCRIPTION

The SMTND-AL control switches use a 10 VDC supply voltage and convert it into different step voltages to obtain minimum, medium and maximum output levels. Two output voltages can be adjusted according to the environmental requirements (switch positions 1 and 2).

3. ARTICLE CODES

	SMTND-3P-AL	SMTND-4P-AL
Supply	10 VDC	10 VDC
Position 0	–	OFF
Position 1	1–10 VDC	1–10 VDC
Position 2	1–10 VDC	1–10 VDC
Position 3	10 VDC	10 VDC

4. INTENDED AREA OF USE

- Speed control of EC fans in ventilation systems
- Voltage control where manual adjustment of 0–10 VDC signals is needed

5. TECHNICAL DATA

- Supply voltage: 10 VDC
- Max. load: 86 k Ω
- Min. load: 54 k Ω
- Enclosure:
 - external: ASA, white, IP54 (according to EN 60529)
 - internal: polyamide, white, IP44 (according to EN 60529)
- Operating ambient conditions:
 - Temperature: -20–40 °C
 - Relative humidity: < 100 % rH (non-condensing)
- Storage temperature: -25–50 °C


6. STANDARDS

- Low Voltage Directive 2014/35/EU
- Electromagnetic Compatibility (EMC) Directive 2014/30/EU
- Commission Delegated Directive (EU) 2015/863 (RoHS 3) of 31 March 2015 amending Annex II to Directive 2011/65/EU of the European Parliament and of the Council as regards the list of restricted substances
- WEEE Directive 2012/19/EU



7. WIRING AND CONNECTIONS

Fig. 1 Wiring diagram

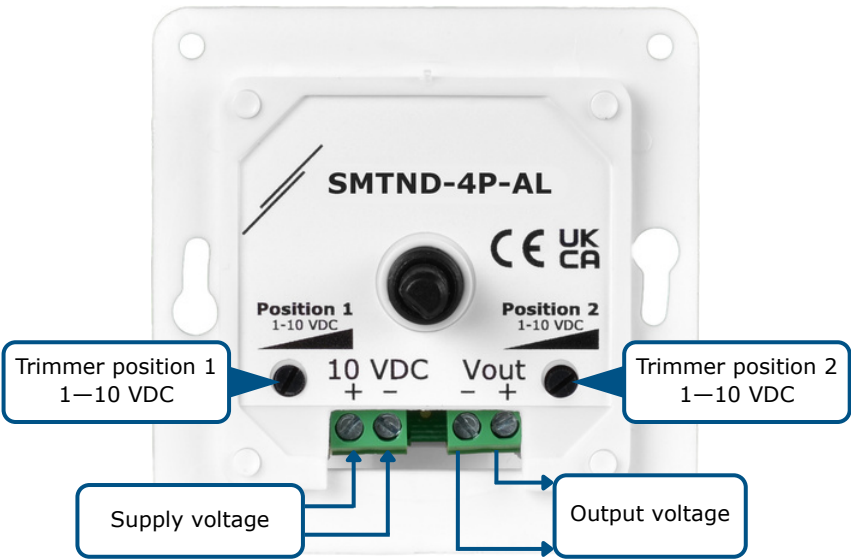

10 VDC	+	Supply voltage 10 VDC
	-	Supply voltage, ground
Vout	+	Output voltage 0—10 VDC
	-	Output voltage, ground
Connections		Cable cross section: max. 2,5 mm²


8. MOUNTING INSTRUCTIONS IN STEPS

Before you start mounting the unit, read carefully “**Safety and Precautions**”. Then proceed with the following mounting steps:

Inset mounting

- 1.Remove the knob by turning it to the right until it pops out.
- 2.Unscrew the nut to remove the cover of the external enclosure.
- 3.Switch off the power supply and do the wiring according to the wiring diagram — see **Fig. 1**.
- 4.Mount the internal enclosure into the wall according to the mounting dimensions shown in **Fig. 2**.

Fig. 2 Mounting dimensions — inset mounting

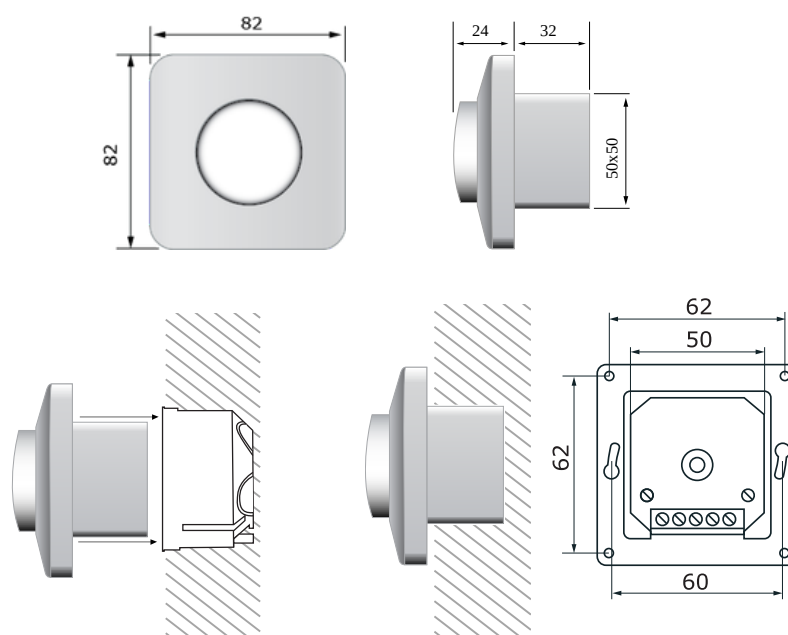

NOTE


Mount the unit so that the terminal block and connections are at the bottom.

5. Refit the cover and secure it with the nut.
6. Use the internal trimmers to adjust the voltage settings of position 1 and position 2.
7. Put back the knob and turn it to the OFF position (if applicable).
8. Switch on the power supply.

Surface mounting

1. Remove the knob by turning it to the right until it pops out.
2. Unscrew the nut to remove the cover of the external enclosure.
3. Mount the external enclosure onto the surface by means of screws and dowels (not included) according to the mounting dimensions shown in **Fig. 3**.

Fig. 3 Mounting dimensions — surface mounting

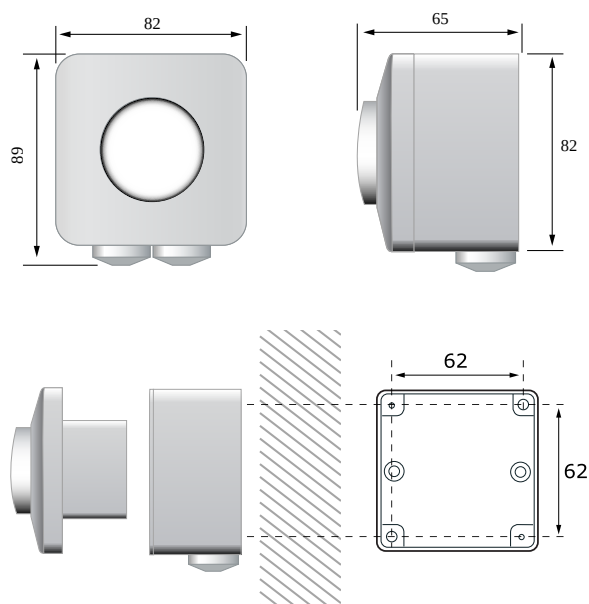

 NOTE

Mount the unit so that the terminal block and connections are at the bottom.

4. Switch off the power supply and insert the cables through the grommets.
5. Do the wiring according to the wiring diagram — see **Fig. 1**.
6. Insert the internal enclosure into the external one and fix it using the screws and washers included in the set.
7. Adjust the output voltage trimmers of positions 1 and 2.
8. Refit the cover and secure it with the nut.
9. Put back the knob and turn it to the OFF position (if applicable).
10. Switch on the power supply.

 NOTE

A 5 mm hole can be drilled at the bottom of the external enclosure to drain the condensed water.

9. VERIFICATION OF INSTALLATION

 ATTENTION

Use only tools and equipment with non-conducting handles when working on electrical devices.

In case of faulty operation, please check if

- the right voltage is applied;
- all connections are correct;
- the regulated device is functioning.

10. TRANSPORT AND STORAGE

Avoid shocks and extreme conditions; stock in original packaging.

11. WARRANTY AND RESTRICTIONS

Two years from the delivery date against defects in manufacturing. Any modifications or alterations to the product after the production date relieve the manufacturer of any responsibilities. The manufacturer bears no responsibility for any misprints or mistakes in this data.

12. MAINTENANCE

In normal conditions, this product is maintenance-free. If soiled, clean with a dry or damp cloth. In case of heavy pollution, clean with a non-aggressive product. In these circumstances, the unit should be disconnected from the supply. Pay attention that no fluids enter the unit. Only reconnect it to the supply when it is completely dry.

