

DTP-L | DIGITAL TEMPERATURE PIPE SENSOR

Mounting and operating instructions



Table of contents

SAFETY AND PRECAUTIONS	3
PRODUCT DESCRIPTION	4
ARTICLE CODES	4
INTENDED AREA OF USE	4
TECHNICAL DATA	4
STANDARDS	4
WIRING AND CONNECTIONS	5
MOUNTING & OPERATING INSTRUCTIONS IN STEPS	5
VERIFICATION OF INSTALLATION	7
MODBUS REGISTER MAPS	7
TRANSPORT AND STORAGE	7
WARRANTY AND RESTRICTIONS	7
MAINTENANCE	7

SAFETY AND PRECAUTIONS



Read all the information, the datasheet, Modbus map, mounting and operating instructions and study the wiring and connection diagram before working with the product. For personal and equipment safety, and for optimum product performance, make sure you entirely understand the contents before installing, using, or maintaining this product.



For safety and licensing (CE) reasons, unauthorised conversion and /or modifications of the product are inadmissible.



The product should not be exposed to abnormal conditions, such as extreme temperatures, direct sunlight or vibrations. Long-term exposure to chemical vapours in high concentration can affect the product performance. Make sure the work environment is as dry as possible; avoid condensation.



All installations shall comply with local health and safety regulations and local electrical standards and approved codes. This product can only be installed by an engineer or a technician who has expert knowledge of the product and safety precautions.



Avoid contacts with energised electrical parts. Always disconnect the power supply before connecting, servicing or repairing the product.



Always verify that you apply appropriate power supply to the product and use appropriate wire size and characteristics. Make sure that all the screws and nuts are well tightened and fuses (if any) are fitted well.



Recycling of equipment and packaging should be taken into consideration and these should be disposed of in accordance with local and national legislation / regulations.



In case there are any questions that are not answered, please contact your technical support or consult a professional.

PRODUCT DESCRIPTION

The DTP-L series are digital temperature water pipe sensors powered over Modbus with 3,3 VDC via an RJ12 connector. They are intended for mounting onto metal pipes and are compatible with various temperature control systems. Thanks to the copper contact plate, we can ensure fast response times and faster response time and a more accurate temperature measurement of the media within the pipe.

ARTICLE CODES

Code	Power supply
DTP-L	3,3 VDC, PoM


INTENDED AREA OF USE

Measuring temperature in metal water pipes

TECHNICAL DATA

- Sensor range: -30—70 °C
- Modbus RTU communication
- Easy wiring via an RJ12 socket
- Quick and easy mounting via a cable tie
- Copper plate for enhanced thermal conductivity
- Heat resistant cable tie 300 x 4,8 mm included
- Thermal pad for a more accurate temperature measurement included (19 x 14 x 1,5 mm)
- Supply voltage: 3,3 VDC, Power over Modbus
- Maximum power consumption: 0,192 W
- Nominal or average power consumption in normal operation: 0,18 W
- I_{max}: 8 mA
- Protection standard: IP65
- Operating ambient conditions:
 - ▶ temperature: -30—70 °C
 - ▶ rel. humidity: 5—95 % rH (non-condensing)

STANDARDS

- EMC directive 2014/30/EU: 
 - ▶ EN 61326-1:2013 Electrical equipment for measurement, control and laboratory use - EMC requirements - Part 1: General requirements
 - ▶ EN 61326-2-3:2013 Electrical equipment for measurement, control and laboratory use - EMC requirements - Part 2-3: Particular requirements - Test configuration, operational conditions and performance criteria for transducers with integrated or remote signal conditioning
 - ▶ EN 61326-2-5:2013 Electrical equipment for measurement, control and laboratory use - EMC requirements - Part 2-5: Particular requirements - Test configurations, operational conditions and performance criteria for devices with field bus interfaces according to IEC 61784-1
- RoHs Directive 2011/65/EC

WIRING AND CONNECTIONS


RJ12 sockets (Power over Modbus)		
Pin 1	3,3 VDC	Supply voltage
Pin 2		
Pin 3	A	Modbus RTU communication, signal A
Pin 4	/B	Modbus RTU communication, signal /B
Pin 6	GND	Ground, supply voltage
Pin 7		


MOUNTING & OPERATING INSTRUCTIONS IN STEPS

Before you start mounting the DTP-L, read carefully **“Safety and Precautions”**.

Follow these steps:

1. Remove the rubber cap of the unit and mount the unit onto the pipe outer surface via placing the thermal pad between the copper plate and the pipe.
2. Secure the unit using the cable tie included in the set as shown in **Fig. 1**.

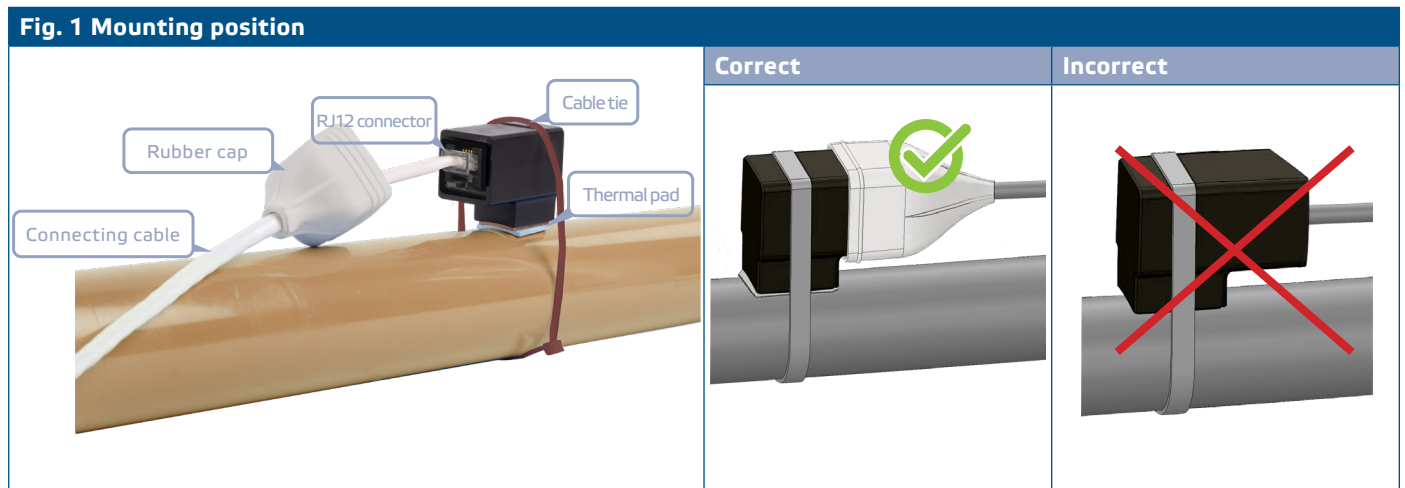


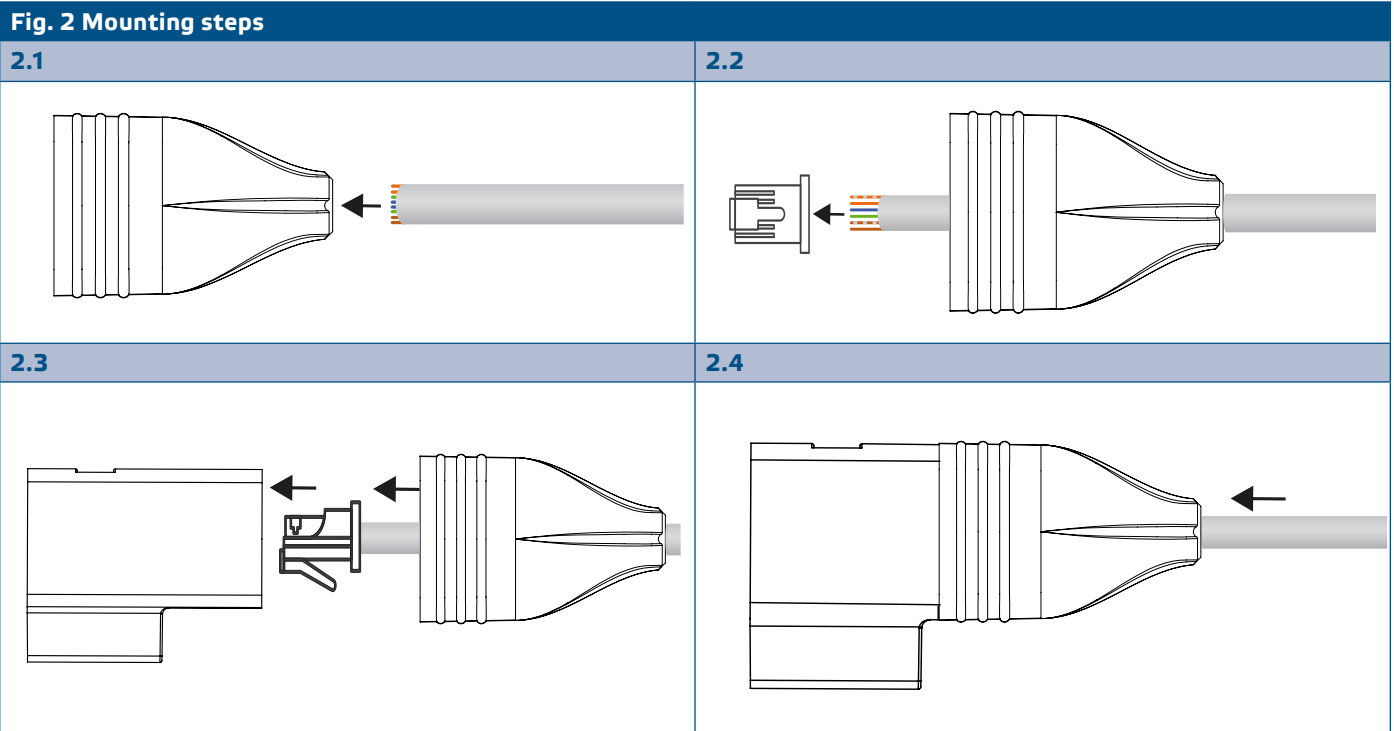

3. Insert the connecting cable into the cap opening (see Fig. 2.1).
4. Crimp the cable with an RJ12 connector adhering to the information in section **“Wiring and connections”** above and plug it into the socket (see Fig. 2.2 and Fig. 2.3).
5. Slide the cap along the cable to cover the connector and maintain the IP rating of the unit (see Fig. 2.4).
6. Switch on the power supply.
7. Customise the factory settings to the desired ones via the 3SModbus software or Sensistant (if necessary). For the default factory setting, see **Table Modbus register maps**.

Optional settings

To assure correct communication, the NBT needs to be activated in only two devices on the Modbus RTU network. If necessary, enable the NBT resistor via 3SModbus or Sensistant (*Holding register 9*).

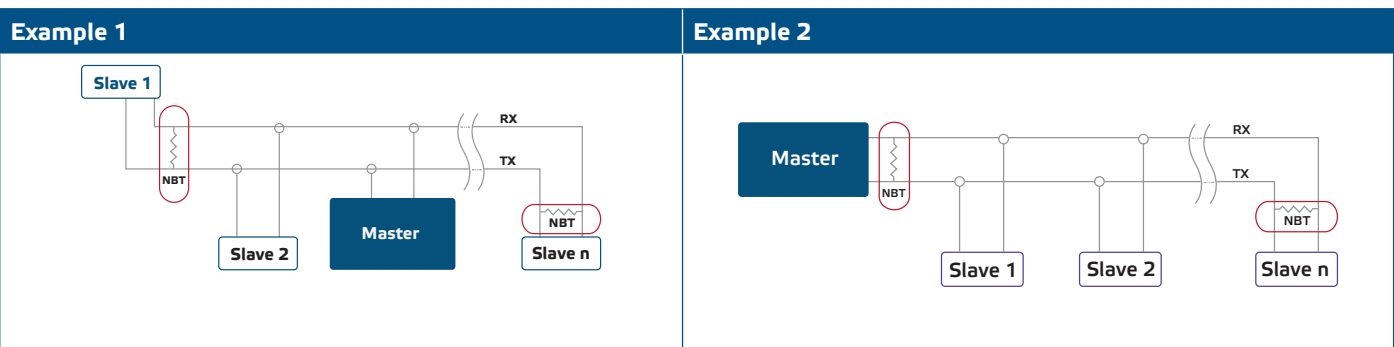

NOTE

On a Modbus RTU network, two bus terminators (NBTs) need to be activated.

CAUTION

Do not expose to direct sunlight!

VERIFICATION OF INSTALLATION

If your unit does not function as expected, please check the connections.

MODBUS REGISTER MAPS

INPUT REGISTERS							
		Data type	Description	Data		Values	
1	Temperature reading	signed int.	Actual temperature level	0–850	500 =	50,0 °C	
2–4			Reserved, return 0				
5	Temperature sensor fault	unsigned int.	Flag that shows if the communication with the temperature sensor is lost	0–1	0 =	No	
					1 =	Yes	
6–10			Reserved, return 0				

HOLDING REGISTERS							
		Data type	Description	Data	Default	Values	
1	Device slave address	unsigned int.	Modbus device address	1–247	1		
2	Modbus baud rate	unsigned int.	Modbus communication baud rate	0–6	2	0 = 4.800 1 = 9.600 2 = 19.200 3 = 38.400 4 = 57.600 5 = 115.200 6 = 230.400	
3	Modbus parity mode	unsigned int.	Parity check mode	0–2	1	0 = 8N1 1 = 8E1 2 = 8O1	
4	Device type	unsigned int.	Device type (Read only)	DTP-L = 1115			
5	HW version	unsigned int.	Hardware version of the device (Read only)	XXXX		0x0100 = HW version 1.00	
6	FW version	unsigned int.	Firmware version of the device (Read only)	XXXX		0x0100 = FW version 1.00	
7–8			Reserved, return"0"				
9	Modbus network resistor termination (NBT)	unsigned int.	Set device as ending the line or not by connecting NBT	0–1	0	0 = NBT disconnected 1 = NBT connected	
10	Modbus registers reset	unsigned int.	Resets Modbus Holding registers to default values. When finished this register is automatically reset to '0'	0–1	0	0 = Idle 1 = Reset Modbus registers	

For more information about Modbus over serial line, please visit: http://www.modbus.org/docs/Modbus_over_serial_line_V1_02.pdf

TRANSPORT AND STORAGE

Avoid shocks and extreme conditions; stock in original packing.

WARRANTY AND RESTRICTIONS

Two years from the delivery date against defects in manufacturing. Any modifications or alterations to the product after the date of publication relieve the manufacturer of any responsibilities. The manufacturer bears no responsibility for any misprints or mistakes in this data.

MAINTENANCE

In normal conditions this product is maintenance-free. If soiled, clean with a dry or damp cloth. In case of heavy pollution, clean with a non-aggressive product. In these circumstances the unit should be disconnected from the supply. Pay attention that no fluids enter the unit. Only reconnect it to the supply when it is completely dry.